



F1-A - Error Code - Range

Possible Solutions

Reset power to the product:

There may be a problem with the Oven Door Latch, the Door Lock Switch, or the associated wiring.

- Power unit down by turning off the circuit breaker(s) for one (1) minute.
 - Power unit up by turning on the circuit breaker(s).
 - Monitor the oven for one (1) minute to ensure the error code does not display again.
 - Verify oven operation.
-

Still need help? Contact us or schedule service.

Please contact us or click below to make an appointment from our preferred list of service providers for service on your appliances.

United States

Canada

[Schedule Service Online](#)

[Schedule Service Online](#)

[Contact Us](#)

[Contact Us](#)

Interested in purchasing an Extended Service Plan?

Please click below to learn more on how you can save up to 25% on New Appliance Extended Service Plans within 30 days of your appliance purchase.

United States

Canada

[Extended Service Plans](#)

[Extended Service Plans](#)

Still need help? Contact us or schedule service.

Please contact us or click below to make an appointment from our preferred list of service providers for service on your appliances.

United States

Canada

[Schedule Service Online](#)

[Schedule Service Online](#)

[Contact Us](#)

[Contact Us](#)

Interested in purchasing an Extended Service Plan?

Please click below to learn more on how you can save up to 25% on New Appliance Extended Service Plans within 30 days of your appliance purchase.

United States

Canada

[Extended Service Plans](#)

[Extended Service Plans](#)